

SK5 User Instructions

◎ Unlock Methods:

1. Unlock by PIN
2. Unlock by Mechanical key: Remove the key hole cover and then unlock by key

◎ Three types of pin codes:

1. The default administrator pin code: 1 set, required before any type of code change
2. User PIN: 10 sets
3. Temporary PIN: 1 set, expires after 1 time use

◎ Door Lock Status:

Status	Sounds	Status	sounds
Operation Success	1 beep	Low Battery	5 beeps in a row
Operation Failure	3 beeps	Enter / Exit Setup	2 beeps

◎ Administrator code Setup:

1. Press the reset button twice to enter setup mode
2. Input factory default administrator code (111111), and then press #
3. Await for a beep sound and then press *00
4. Press the intended new administrator code (consists of 4~6 digits), and then press # to confirm
5. Press # again to exit system

* It is strongly advised that setting up the administrator code immediately upon receiving this product is important

◎ Code Deletion:

1. Press the reset button twice to enter setup mode
2. Input administrator code and then press #
3. Await for a beep sound and then press the code you intend to delete twice (*01*01 or *02*02 to *09*09, then press # to confirm)
4. Press # again to exit system

◎ Volume Setup:

1. Press the reset button twice to enter setup mode
2. Input administrator code and then press #
3. Await for a beep sound and then press *99
4. Press 00 (mute), 01 (low) or 02 (loud), and then press # to confirm
5. Press # again to exit system

◎ Care & Maintenance

1. Administrator code, user pin codes or temporary pin cannot be set as 000000, 111111 or 123456
2. To preserve the appearance of the product, wipe down using a clean cloth. Do not use alcohol or other chemical agents
3. Use Alkaline batteries only

◎ User PIN Setup:

1. Press the reset button twice to enter setup mode
2. Input administrator code and then press #
3. Await for a beep sound and then press *01 or *02 to *09
4. Press the intended PIN (consists of 4~6 digits), and then press # to confirm
5. Press # again to exit system

* Passage mode: Enter the pin, press *#*, then press # to cancel

◎ Temporary PIN Setup:


1. Press the reset button twice to enter setup mode
2. Input administrator code and then press #
3. Await for a beep sound and then press *10
4. Press the intended temporary PIN (consists of 4~6 digits), and then press # to confirm
5. Press # again to exit system

◎ Default Setup


1. Press and hold the reset button for up to 3 seconds until you hear a long beep, which indicates that all users have been deleted

◎ Low Battery Alert

1. Normal operation accompanied with 5 beeps in a row. Please change batteries
2. Pin code memory function. No need to set up pin codes after battery replacement

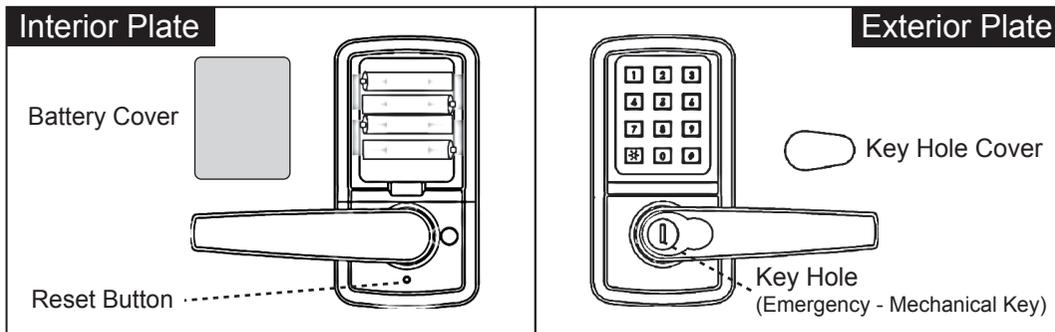


Installation

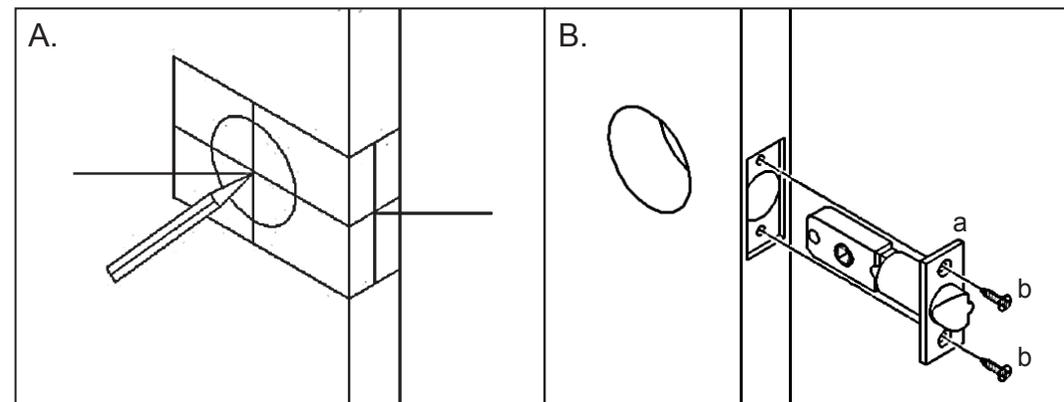

If the door is not bored, use the attached template and follow instructions on it. If the door is bored, skip Step A and proceed to Step B.

Insert latch (a) into the door. Use a Phillips screwdriver to tighten the screws (b) x 2, being careful not to overtighten.

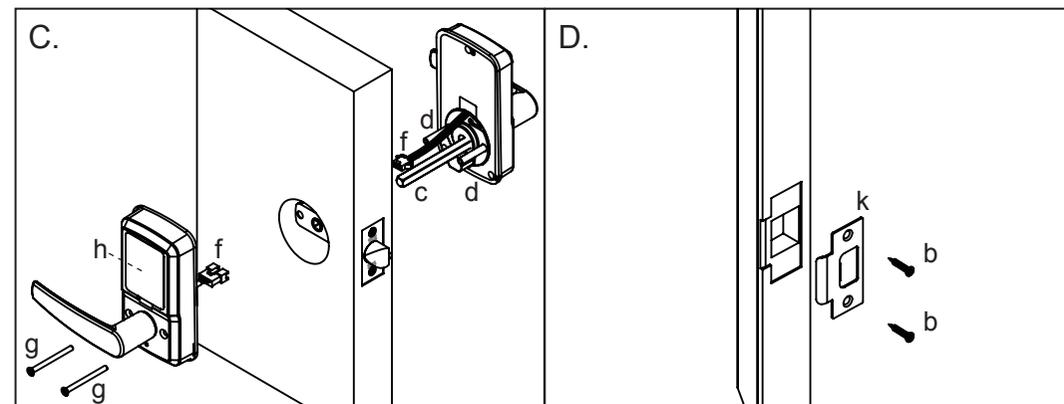

Insert the square spindle (c) through the door and latch (a). Connect the wires (f) x 2. Connect the two plates and tighten screws (g) x 2 into pipes (d) x 2. Remove battery cover (h) and install 4 AA batteries.

Place strike plate (k) on door frame and tighten screws (b) x 2 with screwdriver.